

 


DVR-535

User Manual

Product Description

- **Product structure**

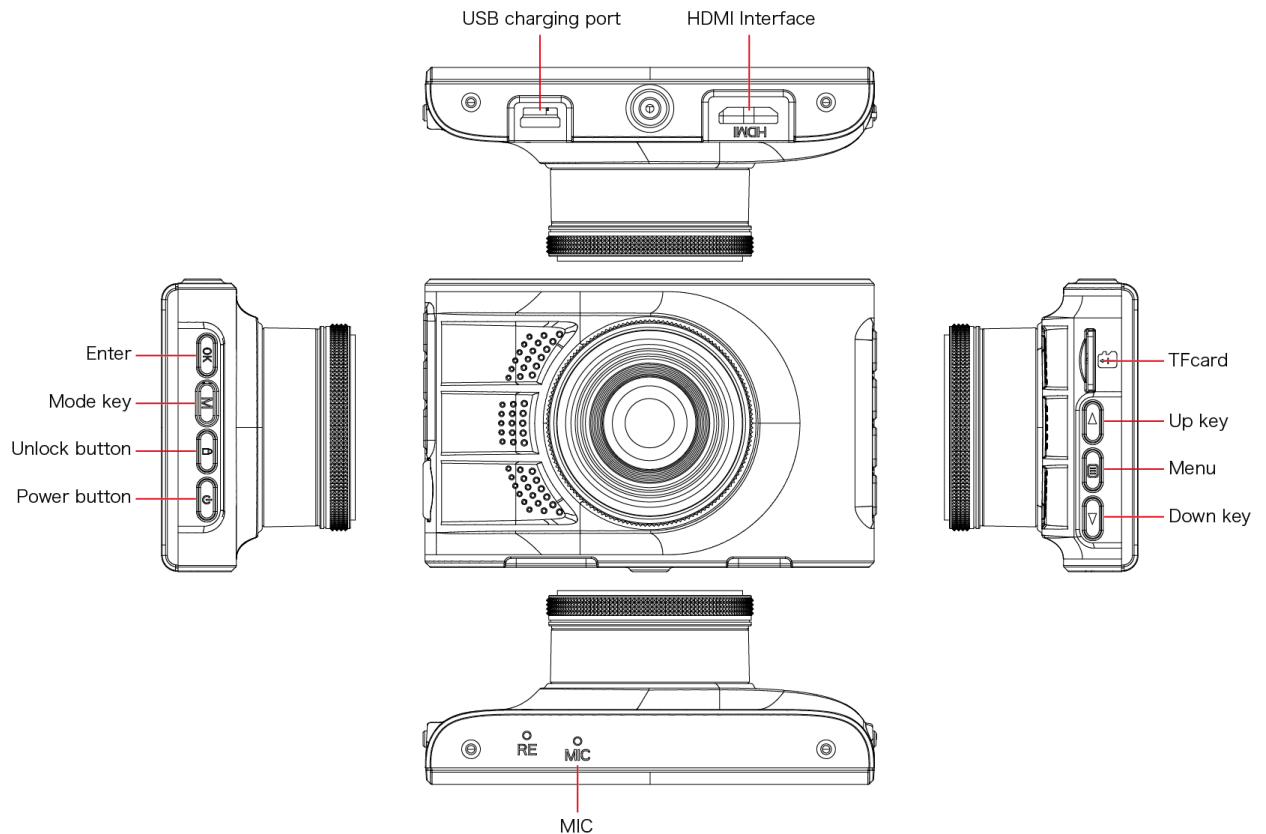

Description of function keys:

- 1) **Select button up**
Standby or short video process click here the key to digital narrow regulation; Down regulate the function key menu options;
- 2) **Menu button**
Short-Press to bring up the feature set menu;
- 3) **down the Select button**
Standby or short video process click here button can digital zoom

adjust; Down to select the function key menu options;

- 4) **USB Data Interface**
USB data interface, **(1)** for connecting a **PC** to transfer data;
(2) for connecting an external power supply to charge the battery or supplies power to operate;
- 5) bracket mounting holes
Connect the car bracket mounting screw holes;
- 6) The power switch
Long press on/off; short infrared night vision lights turned on or off;
- 7) **TF** card slot
Memory card slot
- 8) **The HOLD** button
Press this button, the recording process, the current video File is saved as can not be deleted;
- 9) the mode select button
Short Press to switch between each other in the camera/camera playback;
- 10) **OK to confirm** button
Video and take pictures to confirm button, the camera mode, short press this key to start recording again press stop recording; camera mode Short Press to take pictures;
For the confirmation button in menu mode;

Special Function Description:

The G-sensor function

When the gravity acceleration up to 6g ($1g = 9.80 \text{ m / sec}^2$), the machine will automatically save the current video of the accident, not delete the file;


HOLD function

Press this button, the recording process, the current video file is saved as can not be deleted;

Camera/photo of the basic instructions:


- On and Off


Press  the power button first boot, the blue indicator light lights up at boot time

Again press  the power button is turned off, the blue light goes out


Note: The recording instrument will be prompted to low battery voltage automatic shutdown when battery is low


- Movie mode

Short press  key, switch to camera mode, the upper left corner of the screen displays a camera icon;


Short press  button to start the camera, the camera icon will appear flashing red dot, indicating the video work


- Camera mode

Short press  key, switch to camera mode, the upper-left corner of the screen displays the camera icon;

 
Short press  key camera, take pictures of the screen flashes once said camera to complete.

- Video / photo playback




Short press  key, switch to playback mode, the upper-left corner of the screen to display the playback icon




Short press  key up to select the file;

Short press  key down to select the file;









Short press  button to play the selected video files;

- **Menu setting**

Short press  key to enter the video settings state, then the "video icon" field is a yellow background; Again press  key, switch to setting mode, the "Settings icon" field a yellow background,, short press  key, key to exit the setting.

Bring up the settings, short press   key, you can set the sub key up and down select switch,, short press  key to enter set sub key.

- **Time setting**

Short press  key to enter the set state, short press here  key to set up menu, though  button to select the date and time options,short press  key enter , short press  key, Key in Year / Month / Day // minutes / seconds between each other to switch though   adjust the required value, press  confirm the modification

USB mode

The USB cable connected to the computer, press the power button, the tachograph will automatically pop up the USB menu. There are three modes to choose from:

1: **USB-Disk**

In this mode, video files or photo files access;

2: **the PC-Camera**

Select this mode will bring up the USB video device, real-time taking pictures or video chat;

Battery charging instructions

There are three ways to charge the battery, the red charging indicator light will be lit in the charging process, the charging time is about 180 minutes, the red charging indicator light will automatically switch off after the charging is finished.

1: Use the power adapter to charge

2: Use the PC-USB charging

3: Use the vehicle power charger

Note: When using this product due to improper operation caused by the phenomenon of crash, you can disconnect the battery or press the reset button before turning on power, you can return to normal.

Product specification

Product Name	Car Recorder
Product Type	OK-121/OK-122
Features	High-definition camera, high-definition video.
Color	Customize
G-sensor G-sensor	Built-in (car accident case of emergency save, will not be deleted)
LCD screen size	3.0LTPS
Camera	120 A + grade high-resolution ultra-wide-angle lens
Language	Russia, Japan, France, Italy, Germany, Western, English, Chinese (simplified), Chinese (Traditional), Korean Etc.
File Format	AVI
Video resolution	480P, 720P, Maximum 1080P
Video video formats	M-JPEG
Color effects	Standard
Continuous loop video	Seamless looping video, do not drain seconds
Truck switch machine	Support auto ignition boot, turn off shutdown
Motion Detection Function	Support
Date of hours	Support
Carrier media	Built-in Memory (total: 64MB)
The camera mode	5 million
Photo format	JPEG JPEG
Memory card	TF (up to 32GB)
Microphone	Support
Built-in stereo	Support
Infrared night vision	Support
Video Format	PAL / NTSC
Current frequency	50HZ/60HZ
USB function	1 : USB-Disk 2: the PC-Camera
Power Interface	5V 600ma
Battery	Built-in 250mAh